




How to Configure Mobility Controls APN on Orbic Speed 5G Mobile Hotspot

Follow these steps to add the Mobility Controls feature to your Hotspot.




Connect your device to the Internet through Wi-Fi or Ethernet cable

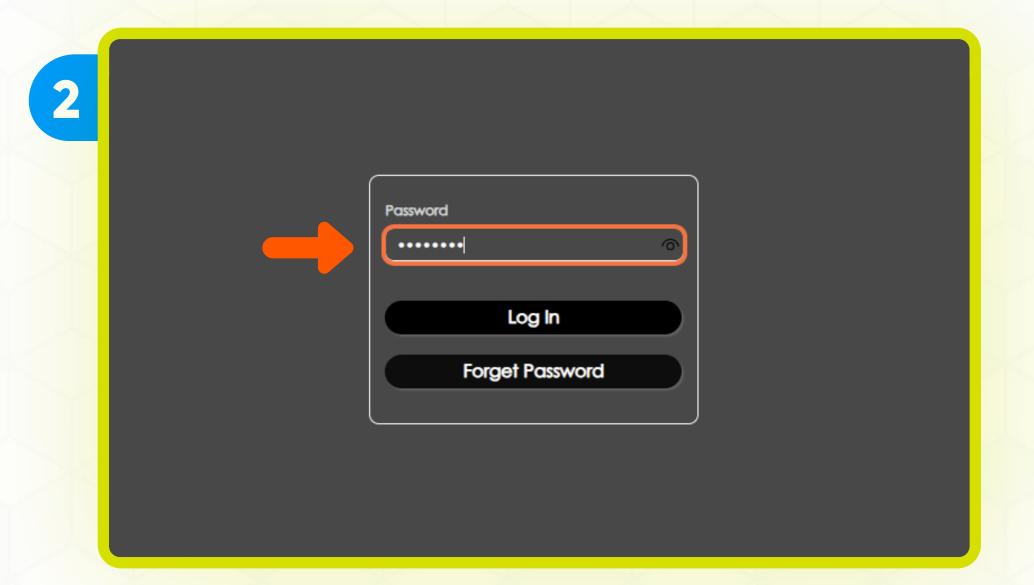


Got to http://192.168.1.1/ and type the password


The default password is the same as the Wi-Fi password located in the device display

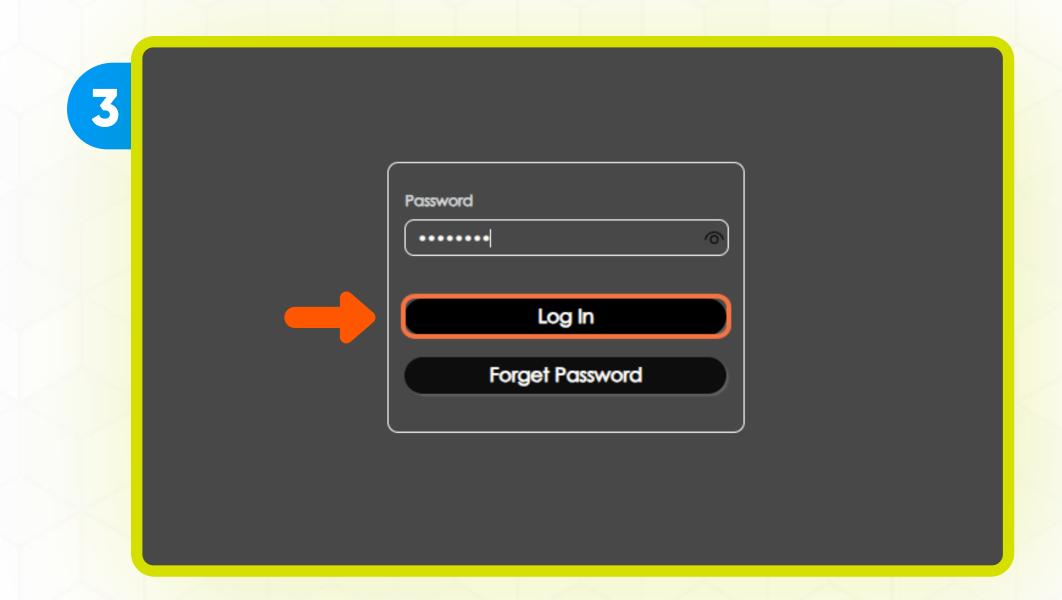

Click on Log in

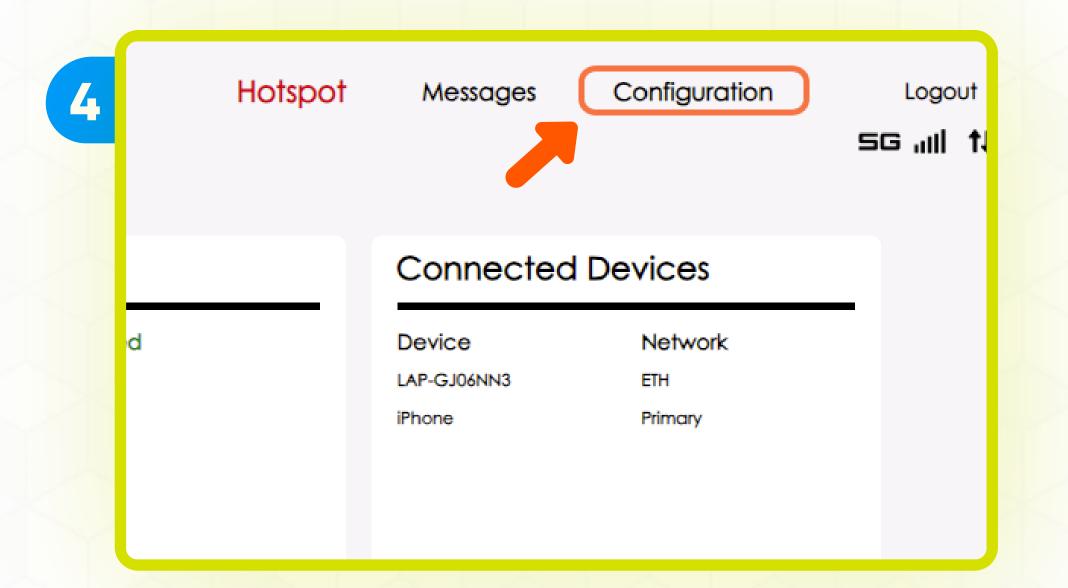


Click on Configuration

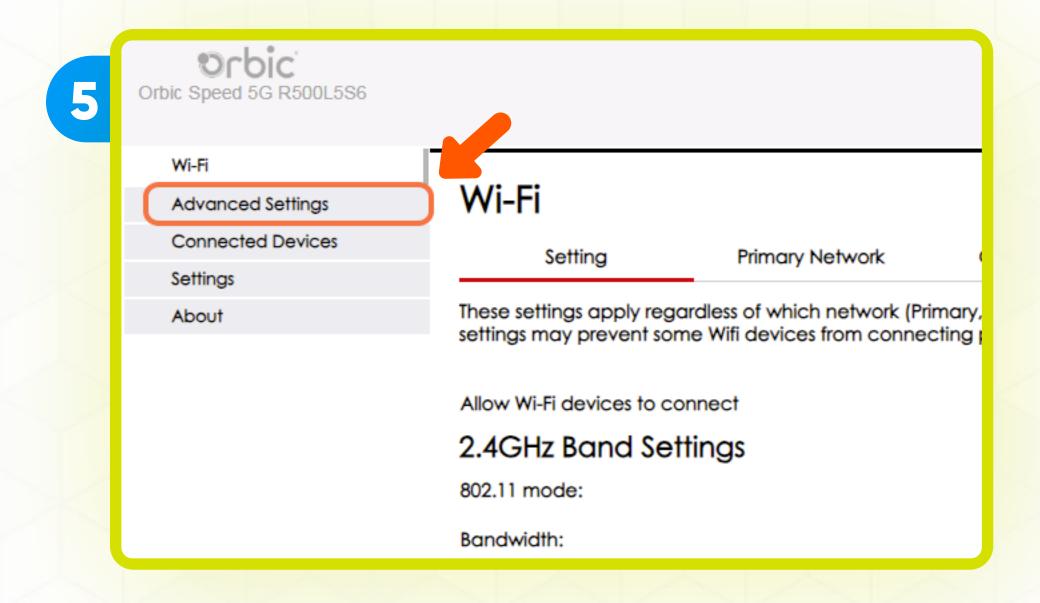


Click on Advanced Settings




Click on Continue

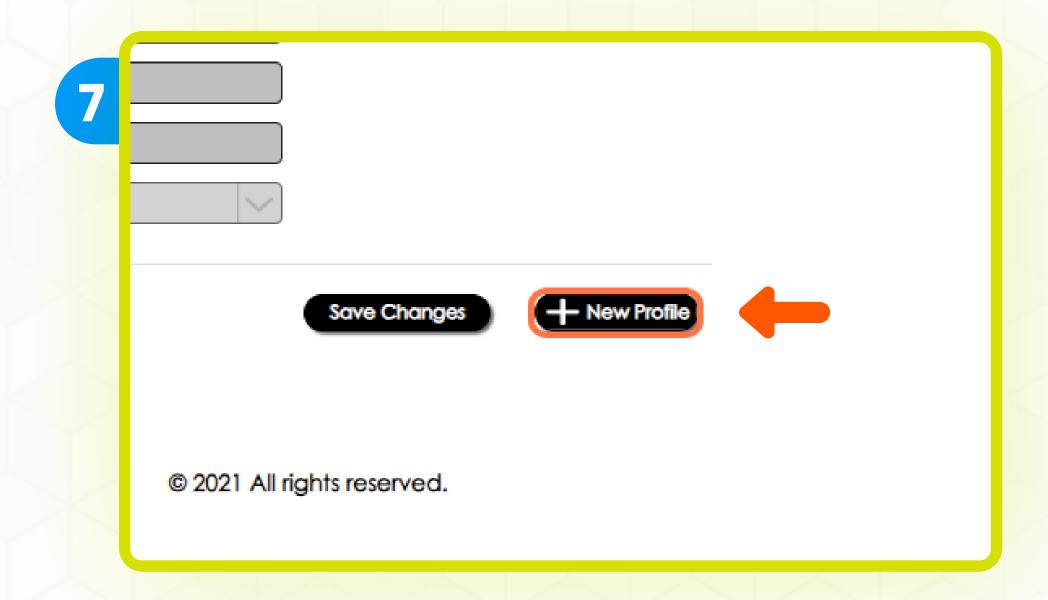


Click on New Profile

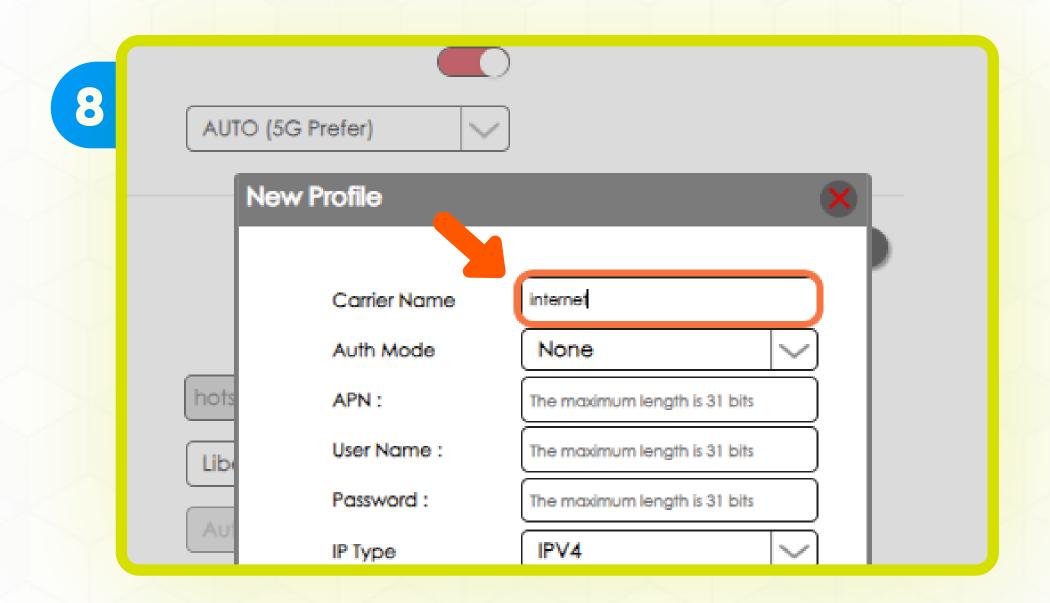


Type internet in the Carrier Name space

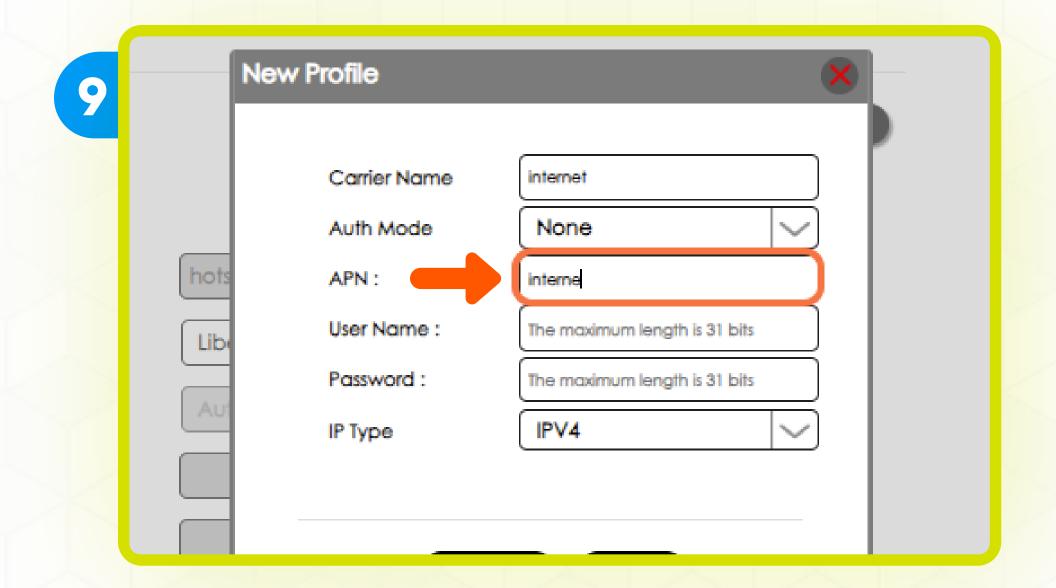


Type internet in the APN space

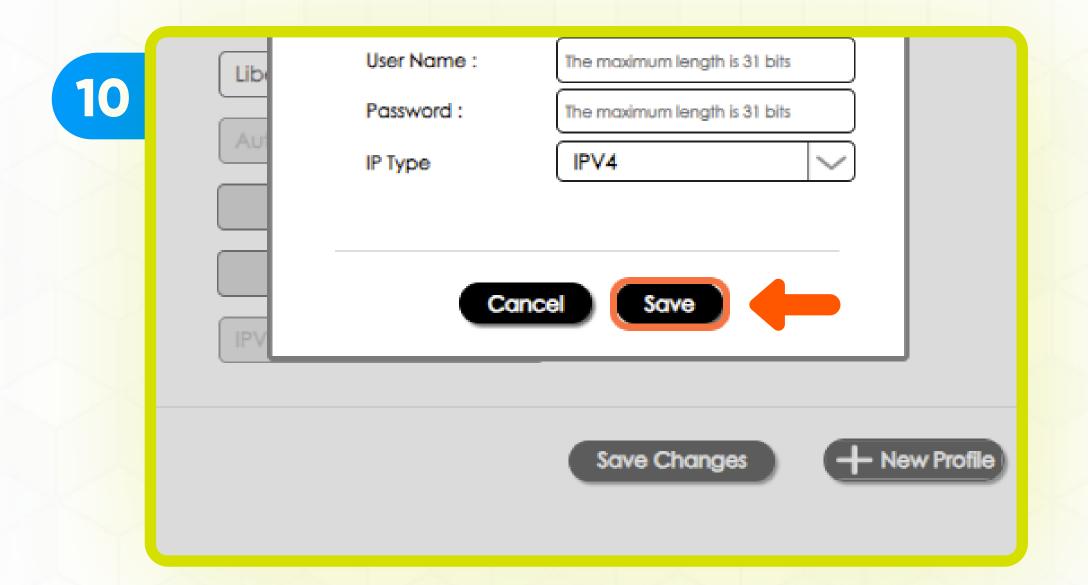

Click on Save

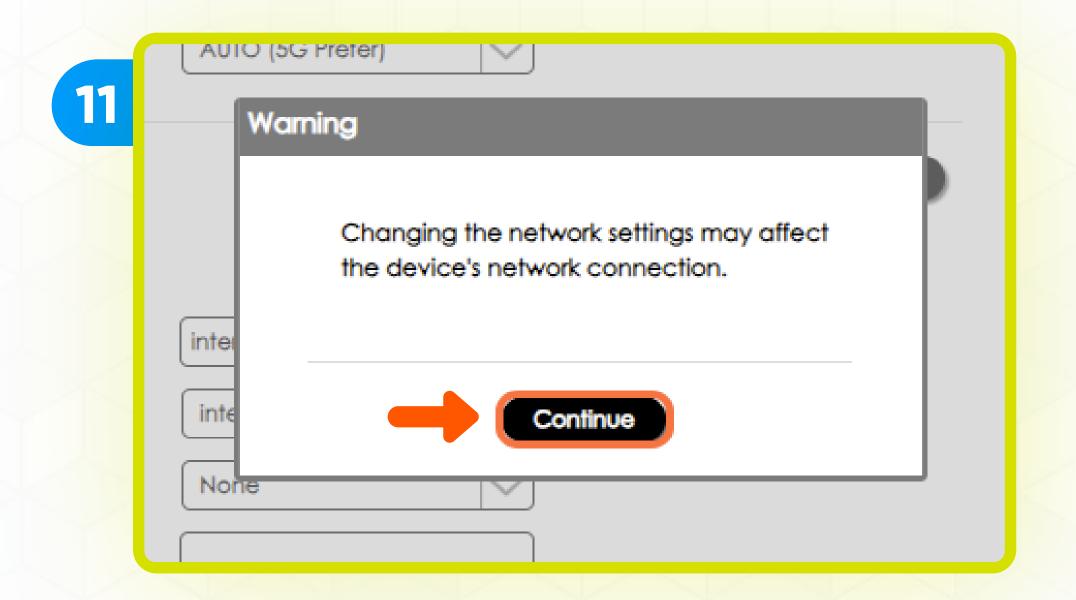

Click on Continue

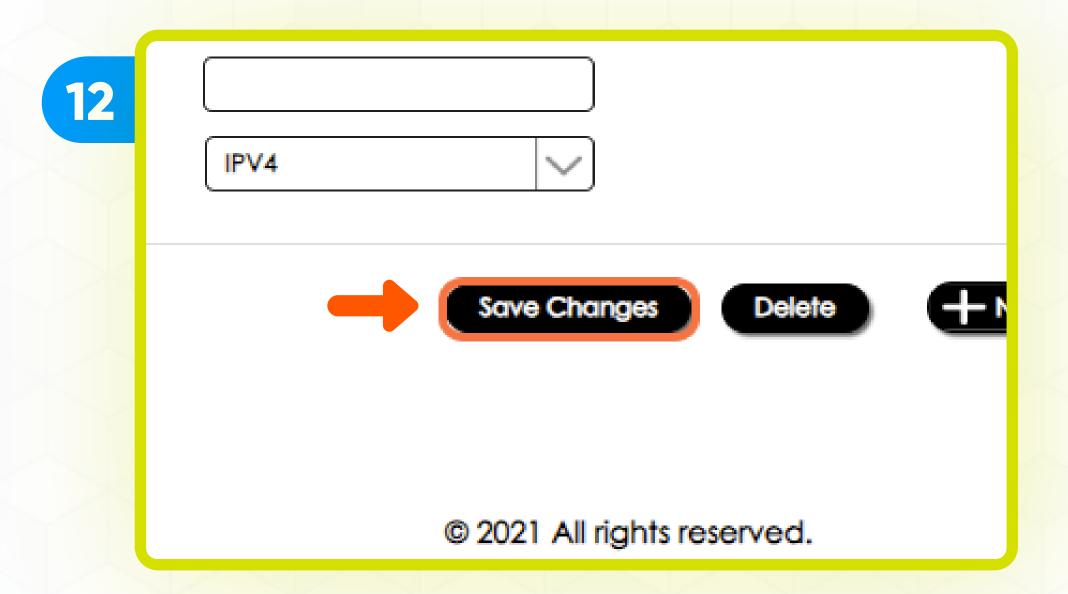

Click on Save Changes

Now your device's APN has been updated to take advantage of





Business

Thank you for allowing us to be your telecommunications provider!

Follow our social networks and learn more about our products and services on:

- **O** libertybusinesspr
- Liberty Business
- libertybusinesspr
- libertybusinesspr.com/faqs/